


## Scribing Scheme for Cabinetry

Scribes or filler panels are the strips of material that go between the cabinets and the walls. When you design cabinetry with Fortschritt Bespoke Cabinetry, the cabinets will be square and rigid to millimetre accuracy but no doubt your walls will not be. Rather than adjusting the cabinets to meet the walls it is better to keep the cabinets square and make up the difference with scribe pieces.

### BASIC SCRIBING SCHEME

When designing cabinetry it is a good idea to make an allowance of around 50mm for the area where the cabinet sides meet the wall. We then supply a scribe piece 70mm wide which can be trimmed to fit in this space:

- The side of the scribe meeting the cabinet is kept square and untouched
- The side of the scribe next to the wall is trimmed to suit using a saw
- The scribes can be held in position with builder's adhesive against fixing blocks attached to the outside of the cabinets

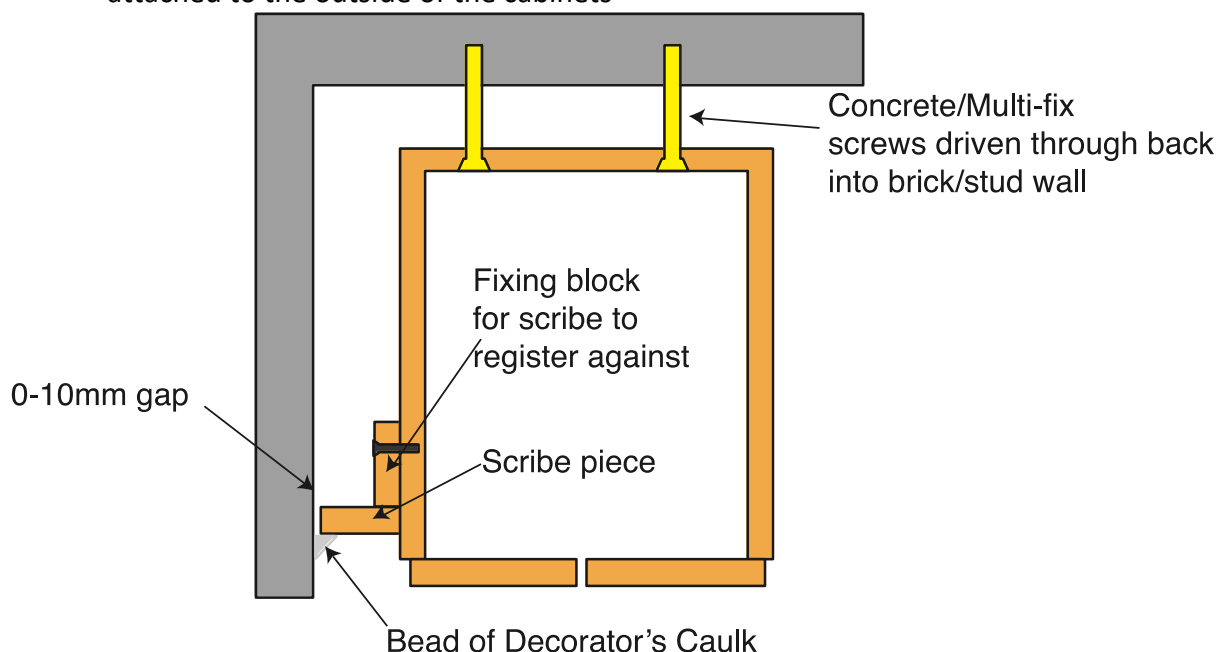

## Scribing Scheme for Cabinetry


### SCRIBE TO WALL INTERFACE POINT

The top tip for scribing is: don't be too ambitious cutting to millimetre accuracy!

The point where scribe meets wall is an interface point of different materials and wherever two dis-similar materials meet there is the possibility for movement over time.

The best provision against this movement is an expandable material such as Decorator's Caulk.

It is best to aim for a gap just under 10mm and then the gap is covered with the caulk.

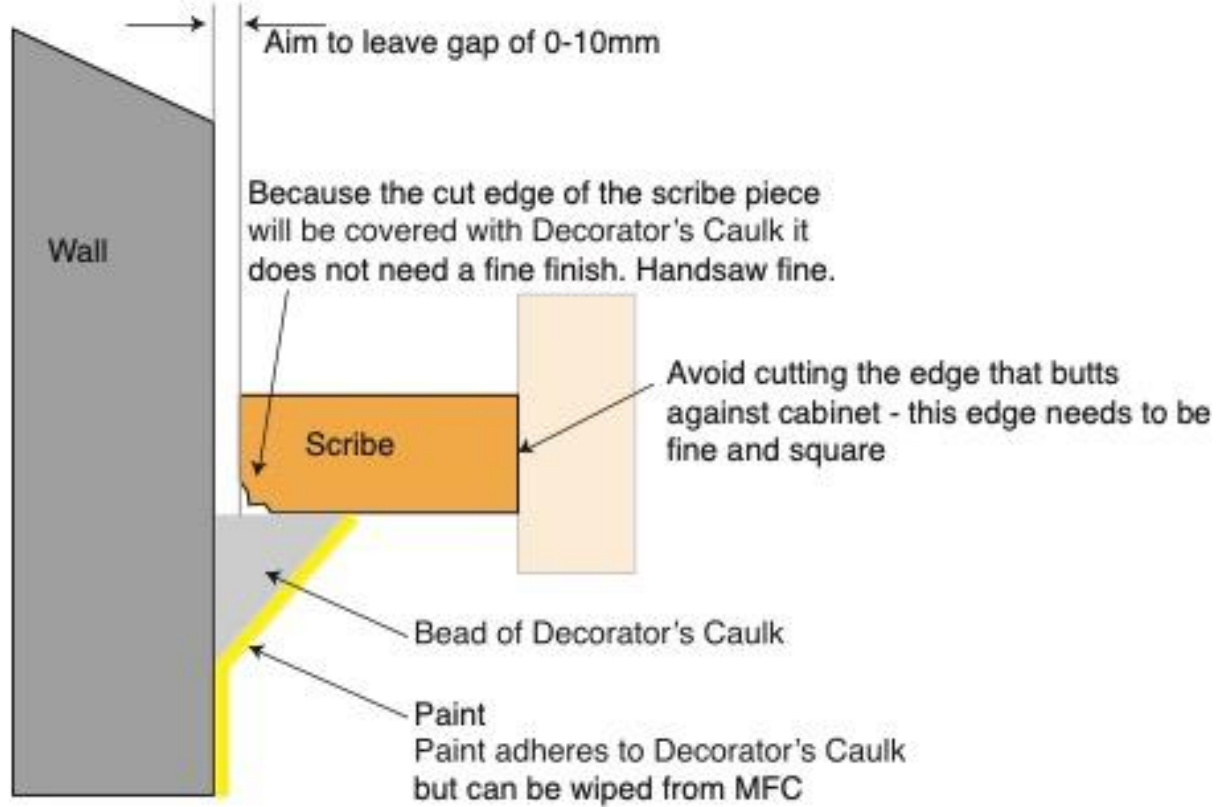

**FORTSCHRITT**  
BESPOKE CABINETRY SYSTEM